

Time and Date Adjustments for Panasonic Telephone Systems

A-Series

Uses **Ext 10 only**

On/Off button or lift receiver
*5
HHMM (24hr)
On/Off button or replace receiver

DBS

Uses **Ext 200 only**

On/Off button or lift receiver
Recall (Note)
#3
DDMMYYYY
HHMM (24hr)
On/Off button or replace receiver

NOTE: Recall for old phones VB3XXX,. Prog for new type phones VBD6XX

ICX

Uses **Any Ext (NOTE)**

Prog
**Conf (81 displayed)
000
Hold (display 0: YYMMDD)
YYMMDD
Hold
HHMM (24hr)
Hold
0-6 (sun-sat)
Hold
Prog
On/Off

NOTE: Phone must have Class Of Service COS to work FF1-0-XX(COS)-23-0

Time and Date Adjustments for Panasonic Telephone Systems

KX-T206E

Uses **Ext 21 only**

On/Off (SP-Phone) or lift receiver

77

HHMM (12hr)

0(AM) or 1(PM)

#

On/Off (SP-Phone) or replace receiver

KX-T30810BE

Uses **Ext 21 only**

On/Off (SP-Phone) or lift receiver

77

HHMM (12hr)

0(AM) or 1(PM)

#

On/Off (SP-Phone) or replace receiver

KX-T61610BE

Uses **Ext 21 only**

On/Off (SP-Phone) or lift receiver

77

HHMM (12hr)

0(AM) or 1(PM)

#

On/Off (SP-Phone) or replace receiver

KX-T123210BE

Uses **First extension (Ext 201 default) only**

Move switch to PROG

0

YYMMDD

Day of the week (1=Sunday, 2=Monday, 3=Tuesday, 4=Wednesday,
5=Friday, 6=Saturday)

HHMM (12 Hour)

1 for AM or 2 for PM

Store

Move switch to SET

Time and Date Adjustments for Panasonic Telephone Systems

KX-TA624E

Uses **First extension (Ext 201 default) only**
Move switch to PROG
0
YYMMDD
Day of the week (1=Sunday, 2=Monday, 3=Tuesday, 4=Wednesday,
5=Friday, 6=Saturday)
HHMM (12 Hour)
1 for AM or 2 for PM
Store
Move switch to SET

KX-TD208E

The time is automatically each day, by the first call after 3AM.

Uses **First or second extension (21 or 22 Default)**
5#
Password (1234 Default)
000
DDMMYY
Day of the week (1=Sunday, 2=Monday, 3=Tuesday, 4=Wednesday,
5=Friday, 6=Saturday)
HHMM (24 Hour)
##

KX-TD612E

The time is automatically each day, by the first call after 3AM.

Uses **Any Extension**
Prog
**
Password (1234 Default)
000
Next
Next
HH (24 Hour)
→
MM
Store
End
Prog

Time and Date Adjustments for Panasonic Telephone Systems

KX-TD816E

Uses	Any Extension
	Prog
	**
	Password (1234 Default)
	000
	Next
	Next
	HH (12 Hour)
	→
	MM
	→
	Use AUTO ANSWER for AM/PM
	Store
	End
	Prog

KX-TD1232E

Uses	Any Extension
	Prog
	**
	Password (1234 Default)
	000
	Next
	Next
	HH (12 Hour)
	→
	MM
	→
	Use AUTO ANSWER for AM/PM
	Store
	End
	Prog

SBS

Uses	Ext 10 only
	On/Off button or lift receiver
	Memory
	#4
	HHMM
	Hold
	On/Off button or replace receiver

Time and Date Adjustments for Panasonic Telephone Systems

S-DBS

Uses	Ext 20 only
-------------	--------------------

On/Off button or lift receiver
Recall
#4
HHMM (24hr)
On/Off button or replace receiver

S-ICX

Uses	Any Ext (NOTE)
-------------	-----------------------

Prog
**Conf (81 displayed)
000
Hold (display 0: YYMMDD)
YYMMDD
Hold
HHMM (24hr)
Hold
0-6 (sun-sat)
Hold
Prog
On/Off

NOTE: Phone must have Class Of Service COS to work FF1-0-XX(COS)-23-0

KX-TVP (Voicemail)

Uses	Any Extension
-------------	----------------------

Call the voicemail, when the voicemail answers:

#6
*998
Password # (If Set)
4
1
HH (12 Hour)
MM
1 for AM or 2 for PM
2
2
#9